

OVERVIEW

The Cam Glide X-1 is a robust linear rail system designed to move cameras in a smooth and predictable way to aid narrative, documentary, tabletop and time-lapse filmmaking.



OPERATION

PLUG IN the battery or power supply and turn the unit on using the on-off button on the far right of the control panel.

The unit will power on and the touch screen will light up.

MANUAL MODE (default setting) Use the SPEED POT (on the far right of control panel) and the DIRECTION SWITCH (in the center) to drive the camera back and forth on the Cam Glide. That's it.

The Cam Glide's brushless DC motor/reduction transmission is very powerful and can move cameras up to 30 pounds in any relationship to the ground. Horizontal, vertical and angled shots can be achieved by simply setting the Cam Glide on or against something solid, setting the 3 axis head to whatever angle you desire and turning the unit on and adjusting the direction and speed on the fly.

PROGRAMED SHOTS are done by using the TOUCH SCREEN. There are no menus – all of the buttons appear once you touch the screen. (The screen can be used with a stylus or your fingernail)

STEP ONE: Use the MANUAL CONTROLS to position the camera to the beginning of the shot. Push the "START POINT" button.

STEP TWO: Use the MANUAL CONTROLS to position the camera to the end of the shot. Push the "END POINT" button.

STEP THREE: PRESS the in "MINUTES" and "SECONDS" buttons for desired time.

Now the machine is programmed.

PRESS "CUE" to move the camera to the starting position.

PRESS "START" to execute your move.

OR

PRESS "MIRROR" to have the camera move back and forth between the two points. The Cam Glide will continue this operation until you PRESS STOP.

The "Mirror" function is a very handy tool for doing interviews where you would like to have an unattended camera moving slowly for an extended period of time. Mirror mode can only be executed from on of the endpoints.

FINALLY: If the Cam Glide Stops running but the touch screen is still on check the battery charge.

IF YOU HAVE ANY QUESTIONS PLEASE CALL VIDCAM BURBANK 818.558.7744
PLEASE GIVE US FEEDBACK – THE CAM GLIDE IS CONSTANTLY BEING UPGRADED BASED ON
USER INPUT. HELP US MAKE IT BETTER FOR YOU!